



# Wall Charger 2 Installation Guide

---



**22kW SOCKET THREE PHASE :**

**EVWC2S22GR** (22KW / WI-FI / LAN / RFID)

**EVWC2S22GGR** (22KW / WI-FI / LAN / 4G / RFID)

## Contents

*click to navigate directly to the page*

[Introduction / Box contents](#)

---

[Safety information](#)

---

[Installation & testing](#)

---

[Troubleshooting](#)

---

[Commercial Installation & Commissioning](#)

---

[Domestic Commissioning  
Stage 1 \(Installer app\)](#)

---

[Domestic Commissioning  
Stage 2 \(User app setup\)](#)

---

[Technical](#)

# Introduction

This guide is intended for use by competent electrical installers to explain basic requirements and options to be considered when installing a BG SyncEV charger. The unit is designed for installations inside or outside, the advanced safety technology we have built into the unit ensures its safe usage. This guide provides information to assist when installing the EVWC2Sx chargers and should not be used with other EV chargers.



---

## Box contents

- EV charger
- Decorative fascia
- Installation template & quick start guide
- Accessories pack containing:
  - » Power connector
  - » Cord grip and screws
  - » M25 gland
  - » 25mm blind grommet
  - » Bonded sealing washers
  - » Assembly screws
  - » Anti-tamper bit
  - » x1 RFID Key fob  
(Additional key fobs can be ordered using the code EVXRFDFOB-01)
  - » **Note** - x3 EVA120CT1 CT clamps are required for load management - not included

---

## Tools required

Hex bit holder, PZ2 screwdriver, suitable drill bit and fixings

# Safety information

**Warning:** The supplied BG SyncEV charger is manufactured to be safe without risk provide they are installed correctly, used, and maintained in accordance with the manufacturers recommendations and installed by a competent electrical installer in accordance with national and local regulations and legislation applicable at the time of installation, e.g. BS7671:2018 amendment 2.

The EV charger should be connected to a three phase (for up to 22kW charging) 400V/415V nominal AC supply.

The supply should run from a dedicated 40A circuit breaker. We recommend the use of a Type B curve circuit breakers. The EV charger features an integral 30mA type-A RCD with 6mA DC leakage detection and therefore an external RCD is not usually required:

1. For cables without earthed metallic covering installed in walls or partitions at a depth of less than 50mm and also within walls and partitions with metal parts, and not protected by steel conduit or similar then RCD protection is required.
2. If the cable is clipped directly to the surface of a wall and does not pass through a wall or partition to the EV charger then a standard B type 40A MCB may be installed into the Consumer unit, however RCD protection may be required for other reasons such as if it forms part of a TT system and the earth

fault loop impedance values cannot be met. This will be in compliance with the current BS7671 Amendment 2 Wiring Regulations. To conform with BS 7671, on occasions a four pole MCB/RCD or other means of isolation may be required.

**Important note:** A DC Leakage fault in the vehicle may “blind” a type “AC” RCD and render it ineffective, never feed any EVSE From an upstream Type “AC” RCD.

## Earthing requirements

The supplied EV charger features an on-board safety monitoring system to detect low or high voltage supplies and potential earth-neutral faults, this in accordance with regulation 722.411.4.1 (iv) of BS7671 2018. If such a condition is encountered the charge cycle is ended or prevented and the EV charger indicator flashes red and effectively becomes a double insulated (class II) device. The vehicle becomes isolated in accordance with Regulation 543.3.3.101(ii) from incoming supply and poses no risk to touch. This feature removes the requirement for an earth electrode where it may be ineffective or introduce further risk.

The EV charger may be connected directly to a TN-C-S (PME) earthing system without any special arrangements. It remains the responsibility of the installer to conduct a risk assessment of the immediate area to a range of 10 meters (equipotential zone) to ensure no other conductive metal fixings pose risks (mixture

of TT/TN-S and TN-C-S), this is important where cable length may enable charging inside or outside of a building/garage where the vehicle is within touch distance.

Where certain conditions dictate an earth electrode must be used it shall be independent from the distributors earth system with no direct interconnection (the incoming supply SWA protective earth should be isolated from the housing and/ or earth electrode). The electrical installer shall install a suitable electrode complete with termination housing and covers where appropriate, warning labels should be visible and close to the unconnected SWA protective earth, e.g. inside the charger.

The earth connection shall be made from the electrode to the charger via copper conductor earth wire of an appropriate CSA for the installation. The earth wire shall be installed in conduit where there is a risk of mechanical damage or UV exposure. Recommended Earth electrode impedance to be <100 ohms.

# Surge protection

Guidance on requirements for surge protection devices given In BS7671: section 443.

The EV charger is protected against transient over voltages ( $\pm 2\text{kV}$  Line-Earth and  $\pm 1\text{kV}$  Line-Line as a requirement of EN 61000-6-1), a direct lightning strike carries a current of  $30\sim 200\text{kA}$  the EV charger's internal protection would provide little or no protection in such an event, likewise nor would an SPD rated less than  $30\text{kA}$ . If life support equipment or business operations could be affected by a lightning strike central SPD protection is advised if it does not already exist.

The guidance on risk calculation in section 443.5 of BS7671 in most cases is not possible due to unknown location of any SPD already fitted, length of cables to calculate LP etc, it is therefore recommended a common sense approach is used on choice of SPD (or if required).

# Isolation and switching for safety and maintenance

To ensure the EV charger can be “turned off” to enhance security and enable maintenance activities, a four pole isolator (or DP RCD or RCBO) suitably rated must be installed within the customer’s property.

An isolator switch is a mandatory requirement for “new builds”, but optional for existing dwellings (at customer’s request), the switch should be mounted between 500mm and 1500mm above finished floor level to comply with regulations. The switch should be rated at 45 Amps.

All installations must comply to BS7671: 2018.

# Installation requirements

The EV charger is suitable for installation inside and outside on a solid wall or structure.

The installer should consult with the building owner to establish their preferred installation location. This should take into consideration the length of charging cable and risk of vehicle impact etc.

It is recommended the charger is installed at a height of 500mm-1500mm as per building regulations BS8300:2018.

If no suitable permanent structure is available, the EV charger can be mounted to a stand. We recommend of the BG SyncEV stand, EVASTAND12S (single) or EVASTAND12T (twin).

Ensure suitable fixings are used depending on the mounting surface. To avoid unnecessary dust inside the enclosure, it is recommended to use the included fixing hole template drill the surface, before fitting the enclosure.

Ensure installation wall has been checked for electric cabling or pipework with a suitable detector.

**NOTE:** if any groundworks are required e.g. cable trenching or earth electrode fitment, it is advisable to check if underground services could be present before commencement. Plans may be available at: [www.linesearchbeforeudig.co.uk](http://www.linesearchbeforeudig.co.uk) (free to domestic users).



The EV charger is suitable for bottom or rear cable entry, if using rear cable entry ensure the included 25mm rubber grommet is used to maintain the IP rating.

If using SWA cable the included 25mm compression gland is NOT suitable, an alternative gland will be required.

When using SWA please supply the charger from the bottom left cable entry point.

A maximum hole size of 32mm is acceptable at this location. Its advisable to earth the SWA armouring at the supply end of the cable.

**Do not drill alternative cable entries into the charger housing, except marked cable entry location for rear or bottom entry.**

We recommend using BG SyncEV Power & Data Combined cable on installs that require a CT clamp to use the chargers dynamic load management capabilities.

All of the cables that are to be connected in to the supply connector should have their insulation striped back 18-20mm. Connectors supplied are suitable for cables of 4-10mm<sup>2</sup>.

## Load balancing

If load balancing is required, three CT clamps will be required for correct balancing on three phase power. We suggest the use of BG SyncEV CT clamps, EVA120CT1 (Not supplied).

These should be fitted around the incoming power to the main fuse and the correct max load (A) to be entered during setup and installation steps.

## External Mid Metering - RS485

If using an external Mid Meter connected via a RS485 connection the Dip switches need to be set. Dip 2 Up/On is required for external Mid Meter use.

## Final Electrical testing

To meet the BS7671:2018 (18th edition) requirements for testing of an electrical installation, the following tests and checks shall be performed by a competent electrical installer before during and after a BG SyncEV charger is installed:

- A visual inspection of the installation including the existing electrical installation.
- Verification of the characteristics of the electrical supply at the origin of the installation to confirm the supply is suitable for the additional load.
- A test to confirm the continuity of the circuit protective conductors.

- A test to confirm the integrity of the circuit insulation resistance.
- A test to confirm the polarity of the installation is correct.
- Where applicable a test to confirm the earth electrode resistance is within acceptable tolerances.  
(or)
- An earth loop impedance test.
- A test of the mechanical operation of residual current devices (RCD's).
- A test to confirm the operation of residual current devices (RCD's) is within stipulated time scales (at the rated current and at five times the rated current operating current).
- A test or calculated measurement of the prospective fault current.
- A verification of the functional operation of the EV charger.
- An electrical installation certificate must be completed.

Ensure electrical testing is done before EV charger commissioning and network setup is performed.

For this testing, the Charger can be set to "Plug and Charge" Mode in the installation App.

# Electrical Installation

- 1 Isolate the power



- 2 Use the included hole template to drill fixing holes



3

Drill base for required cable entry.  
Suitable for 16-32mm hole size.  
If using rear entry, ensure  
included 25mm grommet is used



4

Ensure the supplied washers are  
used to maintain IP rating



5

Ensure correct polarity when making incoming power connections

5 pin plug:


N - Blue

E - Yellow/Green

L1 - Brown


L2 - Black

L3 - Grey

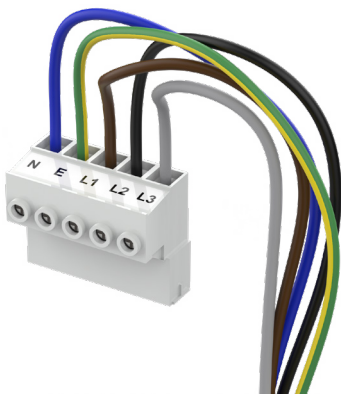


6

Ensure supplied cord grip is fitted on incoming power cable if using bottom cable entry location

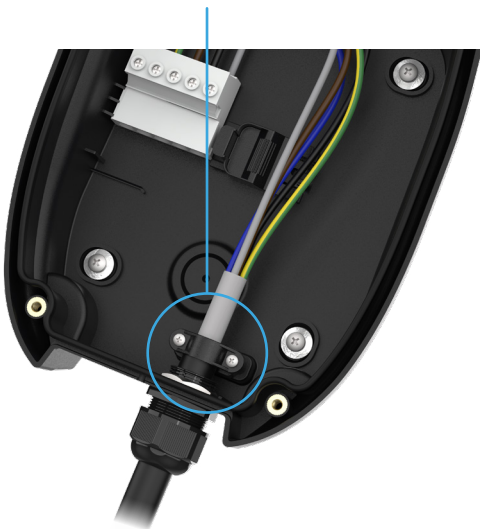

7


Ensure Power connector is fully inserted then slide clip to secure

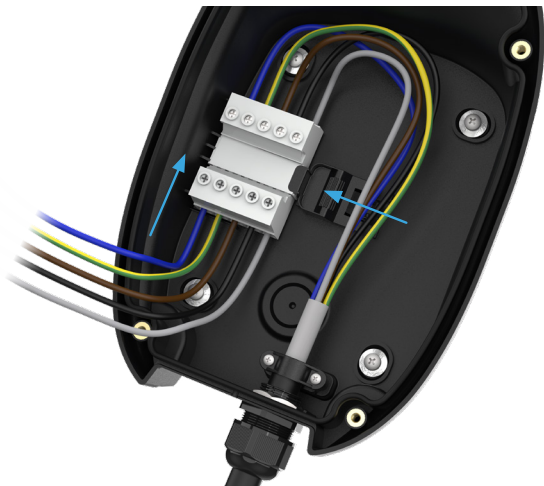


8

For dynamic load balancing, insert wires into the small connector

If using external 485 meter, then dip switch 2 needs to be changed to 'On'

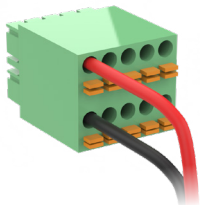


1 2 3 4 5

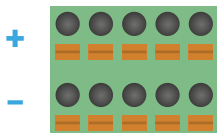

	1	2	3	4	5
+	485A	PV	CT PH1+	CT PH2+	CT PH3+
-	485B	PV	CT PH1-	CT PH2-	CT PH3-


9

Plug connector into PCB, ensure correct polarity

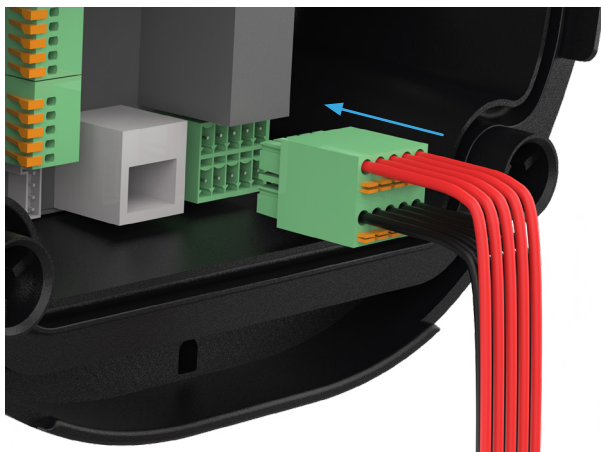

10

Fix charger to the base ensuring correct torque settings

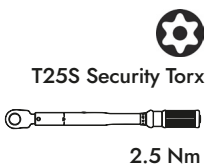



11

Snap front cover trim into place



12

Fit locking screw to secure cover



# Troubleshooting

For further information, or to refer to our FAQs, please visit our website:

[www.syncev.co.uk](http://www.syncev.co.uk)

The status of the EV charger can be identified by referencing the colour shown on the LED indicator:

- **Solid Blue** – Standby – Charger has power and is connected to the network. Or, if in 'plug and charge' mode is not connected to the network, is ready to charge.
- **Flashing BLUE** – Charger is connected but not charging, awaiting confirmation of charge in APP or scheduled start time
- **Solid Dark Green** – Charger is active and Charging
- **Solid Yellow** – Charger is offline from network, check local network is active and Wi-Fi is working on the 2.4Ghz band
- **Flashing Red** – Indicates the charger is in fault mode and has stopped charging for users safety

Potential causes:

- Internal RCD has tripped
- Vehicle fault
- Under or over suitable charging voltage

**Remove connection to the vehicle and reset power to the EV charger.**

# Commercial / Workplace / Fleet installation & commissioning

[4 simple steps:](#)

## 1 CONTACT

Email [workplace@syncev.co.uk](mailto:workplace@syncev.co.uk) with the  
charge-point owner contact details

---

## 2 CONNECT

Install the charge-points

---

## 3 CONFIGURE

Set the configurations in the  
BG SyncEV installer app and connect  
all chargers to the internet

---

## 4 COMPLETE

Pass the charger details to the  
charge-point owner

---

[How it works:](#)

To streamline the process, email us  
**before the first day of installation**  
with the following information:

- **Model and charger ID**  
(for every charger in the installation)
- **Contact details for the charge-point owner:**
  - Company name
  - Name of charge-point manager
  - Site address
  - Telephone number for charge-point manager
  - Email address for charge-point manager

Our Commercial Team will contact the charge-point owner to carry out the quick and simply Monta setup process.

**By using this process we will have the back-office set up for installation day, ensuring all chargers are immediately ready for customer use once configured.**

# Domestic Commissioning

## Stage 1 of 2


INSTALLER APP - [Download the 'BG SyncEV Installer' app by clicking this link](#)

Also available from the Installer Portal on the [syncev.co.uk website](https://syncev.co.uk), or using the QR code opposite.




Upon powering the charger, the status indicator light will show Yellow. This indicates that the charger is ready for network setup but is not yet connected to the internet.

For Wi-Fi connection we recommend that the router is set to only 2.4GHz band to reduce the risk of possible conflicts. Once setup the router can be restored to both 2.4GHz & 5GHz bands.

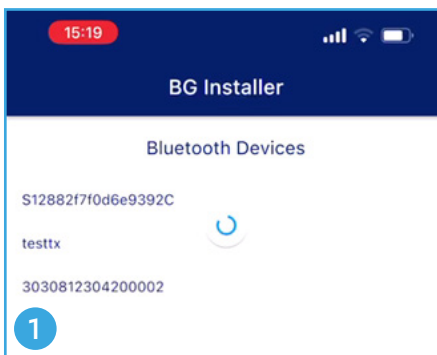

1. Ensure Bluetooth is active on your device. Open the BG EV Charging App and select the Charger ID Code as shown on the charger identification label.

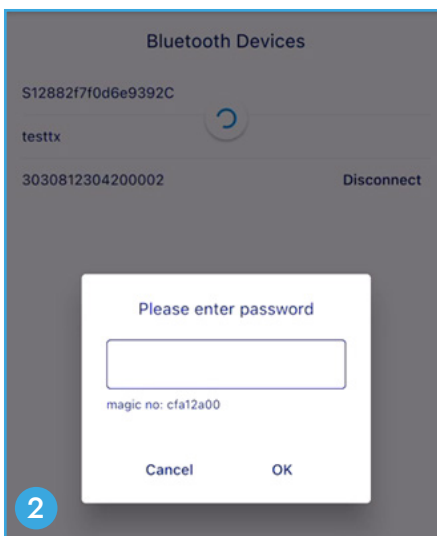

2. Then enter the password shown on the identification label.

Charger ID: CP20230002

**Charger Management Software**

'Monta' is the included EV Charging app. 'EV.Energy' and 'Sync EV' are alternative options (additional costs may be incurred). 'Manual' can be used for further alternative back offices. If unsure, choose Monta.

Charger Server: Monta

**Charging Settings**

Charger Mode: App

Max Charger Current: 6A

Indicator Brightness: 0-100

3 — 6

3. Select '**Monta**' - this is the included app. 'EV.Energy' and 'SyncEV' are alternative options (additional costs may be incurred). '**Manual**' can be used for other alternative back offices. If unsure, choose '**Monta**'.
4. Charge Mode:  
'**APP**' for smart charging via the consumer App (see next page);  
'**Plug and Charge**' for non-smart charging. Use 'Plug and Charge' if connection to server cannot be established and car charging is required.
5. Max Charger Current:  
Set to max current supported by installation if less than default 32A.
6. Indicator Brightness:  
Adjust from 1 to 100% to change the brightness of the status indicator.

**Load Management Settings**

Dynamic Load Management: ☐

Clamp Configuration: Single CT Clamp

Home Max Current: 0-120

7 — 8

Next

7. **Dynamic Load management:**  
If dynamic load management is required then toggle right and select Clamp Configuration.
8. **Home Max Current:**  
For load balancing this should be the same or less than the main fuse rating. EV charger will reduce its charging rate to limit the total home load to be under the limit. If the available current is under the minimum of 6A the EV charger will pause the charging session.

Press Next to save these settings.



Charger ID: CP20230002

**Electrical Measurements**

Clamp 1 Value (A):	NA
Clamp 2 Value (A):	NA
Clamp 3 Value (A):	NA
Clamp 4 Value (A):	NA
L1 Voltage (V):	

9 **Next**

9. Check the shown electrical measurements match measured readings. This will allow checking the Load management CTs are fitted correct orientation.  
Press Next to continue

Please select the connection methods. You may select more than one. The priority of connection is LAN, WiFi, then 4G (if this model supports it).

WiFi ☐ LAN ☐ 4G ☐

10

10. Choose between Wi-Fi, 4G and LAN.
- For Wi-Fi select the SSID network name and enter password.
  - For LAN ensure that “Manually set Static IP Address” is set to OFF (unless advanced settings are required).
  - For 4G the setting will have been pre-configured.

Multiple options can be selected if required, this will allow a fall-back, e.g From Wi-Fi to 4G if fitted in case of network loss.

Charger ID: CP20230002

Please select the connection methods. You may select more than one. The priority of connection is LAN, WiFi, then 4G (if this model supports it).

WiFi ☒
LAN ☐
4G ☐

### WiFi Settings

WiFi SSID:

WiFi Password:

Expert tip: WiFi is limited to DHCP.

### Wired LAN Settings

Manually Set Static IP Address: ☐

IP Address:   
*Example: 192.168.1.10*

Subnet Mask:   
*Example: 255.255.255.0*

Default Gateway:   
*Example: 192.168.1.1*

DNS:   
*Example: 8.8.8.8*

### 4G Settings

4G APN:

4G Account:

4G Password:

11. On LAN the charger will default to DHCP. If static IP is required for the network connection, set the option "Manually Set Static IP Address" to OFF and a manual IP address can be entered.
12. Press next to start network connection, the charger will attempt a network connection, If successful will then reboot to complete an RCD and function check.



In less than 2 minutes, the indicator should turn from Yellow to Blue to confirm network connection.

If the charger continues to show yellow, power cycle (switch off/on at fuse board) and reconnect via the app to check the settings are correct.

If still unable to connect to the network but need to use the charger then change the Charge Mode to **'Plug and Charge'** and press **'SET'** again to re-update settings.

If unable to establish network connection call **01952 983 940**  
or email: [support@syncev.co.uk](mailto:support@syncev.co.uk)

**Note:** The network connection from the device to the Internet is fully encrypted and secure. Additionally, no user data is stored on the charger.

# Domestic Commissioning

## Stage 2 of 2

1. Download the Monta smart app:

[Apple app store](#)  
[click here](#)



[Google play store](#)  
[click here](#)



or search for **'Monta EV charging'** on Apple app store or Google Play

2. Using your smart-phone scan the unique Monta QR Code on the **'Quick Start Guide'** sheet supplied with the EV Charger.


If you're unable to use the QR, open a web browser on your smart-phone and manually type the URL on the sticker

3. Open the Monta app


iOS




Android

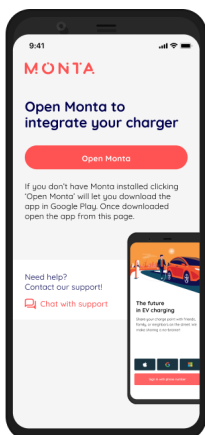


4. Create an account using your customers phone number or social logins (Apple/Google/Microsoft)

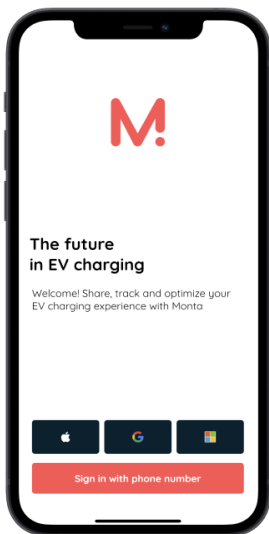

5. Connect the EV charger to Monta - name the charge-point and set the location

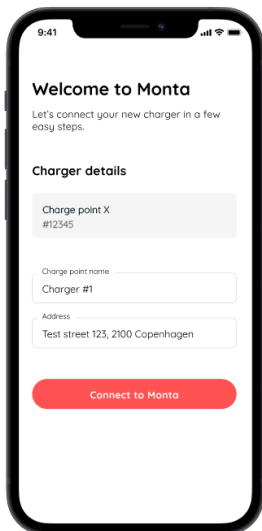

6. **Successful connection** - When you reach this step, your charge-point is connected and you can use Monta to start charging

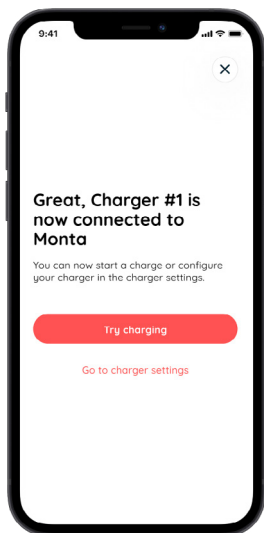

## **Need help with the app?**

Contact Monta customer support through the app or via the website [Monta.com](https://monta.com)

## **Need help with the charge-point?**

Contact BG SyncEV technical support at:

[support@syncev.co.uk](mailto:support@syncev.co.uk)

or via the website at [www.syncev.co.uk](https://www.syncev.co.uk)

# Technical information

## Environmental Protection



This symbol is known as the “Crossed-out Wheelie Bin Symbol”. When this symbol is marked on a product or battery, it means that it should not be disposed of with your general household waste. Some chemicals contained within electrical/electronic products or batteries can be harmful to health and the environment. Only dispose of electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment.

## Guarantee

BG SyncEV products are guaranteed against faulty materials and workmanship for a period of 3 years from date of delivery: products will be repaired or (at BG SyncEV’s discretion) replacements will be supplied or (at BG SyncEV’s discretion) a credit note will be issued. This guarantee is subject to BG SyncEV’s conditions of sale and in particular to the following conditions being met:

1. Notification of any defect is given to BG SyncEV as soon as reasonably practicable after becoming apparent, and the products then returned to BG SyncEV.
2. The products have only been operated under normal operating conditions and have only been subject to normal use.
3. No work (other than normal and proper maintenance) has been carried out to the products without BG SyncEV's prior written consent.
4. The products have been assembled, or incorporated into other goods, by a qualified and recognised electrician and only in accordance with any instructions issued by BG SyncEV.
5. The defect has not arisen from an item manufactured or supplied by a person other than BG SyncEV.
6. 3 year warranty as standard, optional product registration can be completed on the BG SyncEV website.

[Follow this link to visit our Warranty web-page](#)





# Technical data

<b>CODES :</b>	<b>EVWC2S22GR</b> (22KW / WI-FI / LAN / RFID) <b>EVWC2S22GGR</b> (22KW / WI-FI / LAN / 4G / RFID)
<b>TYPE :</b>	SOCKETED
<b>SOCKET / PLUG :</b>	TYPE 2 SOCKET WITH AUTO LOCK
<b>KW :</b>	THREE PHASE : 22KW 32A MODE 3*†
<b>MIN CHARGE CURRENT :</b>	CONFIGURABLE, 6 - 32A
<b>ELECTRICAL INPUT :</b>	THREE PHASE : 400-415V, 50-60Hz
<b>COLOUR :</b>	BASE & BODY RAL 9005 (BLACK) TRIM - RAL 7016 (ANTHRACITE GREY) OPTIONAL COLOURED TRIMS AVAILABLE AS ACCESSORIES
<b>CABLE MANAGEMENT :</b>	BUILT IN CABLE WRAP
<b>PEN PROTECTION :</b>	YES, IN-BUILT EARTH DISCONNECTION
<b>EARTH ROD :</b>	NOT REQUIRED
<b>RCD PROTECTION :</b>	YES, 6mA DC, 30mA AC TYPE-A, IN-BUILT
<b>OVERLOAD AND FAULT PROTECTION :</b>	OVER CURRENT AND FAULT PROTECTION
<b>ELECTRICAL CLASS :</b>	CLASS 1, HOUSING CLASS 2
<b>CONSUMER UNIT REQUIREMENTS :</b>	40A MCB OR 30mA TYPE-A RCD (DEPENDENT ON CABLE TYPE &/OR ROUTE)
<b>LOAD BALANCING :</b>	THREE PHASE : 22KW 32A MODE 3 VARIANTS REQUIRE 3x EVA120CT1 LOAD MANAGEMENT KITS (NOT SUPPLIED)
<b>METER ACCURACY :</b>	2% CLASS C EQUIVALENT INTERNAL METER WITH OPTION FOR CONNECTION TO EXTERNAL RS485 MODBUS METER
<b>TERMINALS :</b>	COMBI SCREW FIRST FIX PLUG CONNECTOR

<b>INDICATOR :</b>	RGB LED AND BUZZER
<b>INDICATOR MODES :</b>	BLUE - STANDBY, FLASHING BLUE - PREPARING, GREEN - CHARGING, YELLOW - NO NETWORK, RED - ERROR
<b>HOUSING :</b>	UV STABILISED POLYCARBONATE
<b>WALL FIXING :</b>	4 POINT WITH HORIZONTAL AND VERTICAL ADJUSTMENT, SUPPLIED FIXING HOLE TEMPLATE. FIXING HOLE CENTRES : 110 HORIZONTAL, 145 VERTICAL (MM)
<b>IP / IK RATING :</b>	IP55 / IK10
<b>SOC MODULE :</b>	AI ESP32-S SOC
<b>WI-FI &amp; ETHERNET :</b>	2.4Ghz 802.11 B/G/N & RJ45
<b>WI-FI SECURITY :</b>	WPA/WPA2/WPA2-ENTERPRISE/WPS
<b>BLUETOOTH :</b>	4.2 BR/EDR and BLE
<b>CONNECTION PROTOCOL :</b>	OCPP 1.6j
<b>4G DATA :</b>	<b>MODEL SPECIFIC</b> 3 YEARS INCLUDED, WHEN USED WITH MONTA (ON THE INCLUDED PACKAGE). TOP-UP ONLINE TO CONTINUE SERVICE AFTER 3 YEARS
<b>APP :</b>	POWERED BY MONTA
<b>OPERATING TEMP :</b>	-25 TO +40°C†
<b>SOFTWARE &amp; FIRMWARE UPDATE :</b>	OVER-THE-AIR
<b>WARRANTY :</b>	3 YEARS
<b>STANDARDS &amp; APPROVALS :</b>	IEC61851-1, IEC61439-7, IEC 62955, IC 61851-21-2, BS EN62196, EN301 511, EN 301 908-1/2/13, EN 301 489-3, EN 300 330, EMC COMPLIANT, CE, UKCA, THE ELECTRIC VEHICLES (SMART CHARGE POINTS) REGULATIONS 2021 INCLUDING SCHEDULE 1

**SUPPLIED ACCESSORIES :** 5x BASE FIXING WASHERS,  
5x ASSEMBLY LID BOLTS, 1x BLANKING  
PLUG AND 1x 25MM COMPRESSION  
GLAND, USER-SIDE CONNECTOR, CORD  
GRIP AND 2x CORD GRIP ASSEMBLY  
SCREWS


**DIMENSIONS (MM) :** 305 (H) x 201 (W) x 115 (D)

**ADDITIONAL :** ANTI TAMPER DETECTION - 2 LAYER  
PROTECTION, BLUETOOTH TO  
BLUETOOTH COMMISSIONING

**ACCESSORIES :** SINGLE CHARGER STAND  
(EVA120CT1)  
TWIN CHARGER STAND  
(EVA120CT2)  
LOAD MANAGEMENT KIT  
(EVA120CT1)  
CHARGING CABLES  
COLOURED TRIMS  
(VARIOUS OPTIONS, SEE SYNCEV.CO.UK)

\* Requires a 3-phase electrical supply. 22kW AC charging rates  
are vehicle dependent, check with manufacturer

† Output may reduce in extreme temperatures to protect the  
charger and connected vehicle

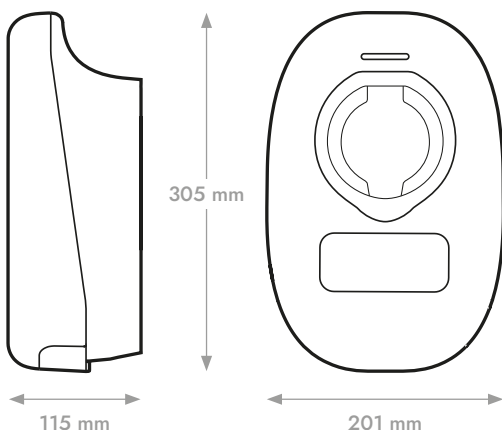

# Technical support

## Need help with the app?

Contact Monta customer support through the app or via the website [Monta.com](https://monta.com)

## Need help with the charge-point?

Contact BG SyncEV technical support at:

[support@syncev.co.uk](mailto:support@syncev.co.uk)

or via the website at [www.syncev.co.uk](https://www.syncev.co.uk)

**BG SyncEV is a trading name of Luceco PLC.**

Luceco PLC – Stafford Park 1, Telford, TF3 3BD, England

(EU) Luceco SE – C/ Bobinadora 1-5, 08302 Mataro, Spain